






INSTALLATION INSTRUCTIONS FOR DESIGN SPECIALTIES SINGLE DV FRONTS

TOOLS NEEDED:
SCREW GUN OR DRILL AND PHILLIPS SCREWDRIVER

HARDWARE KIT CONSISTS OF:
DV SUPPORT ANGLE



8 SHEET METAL SCREWS

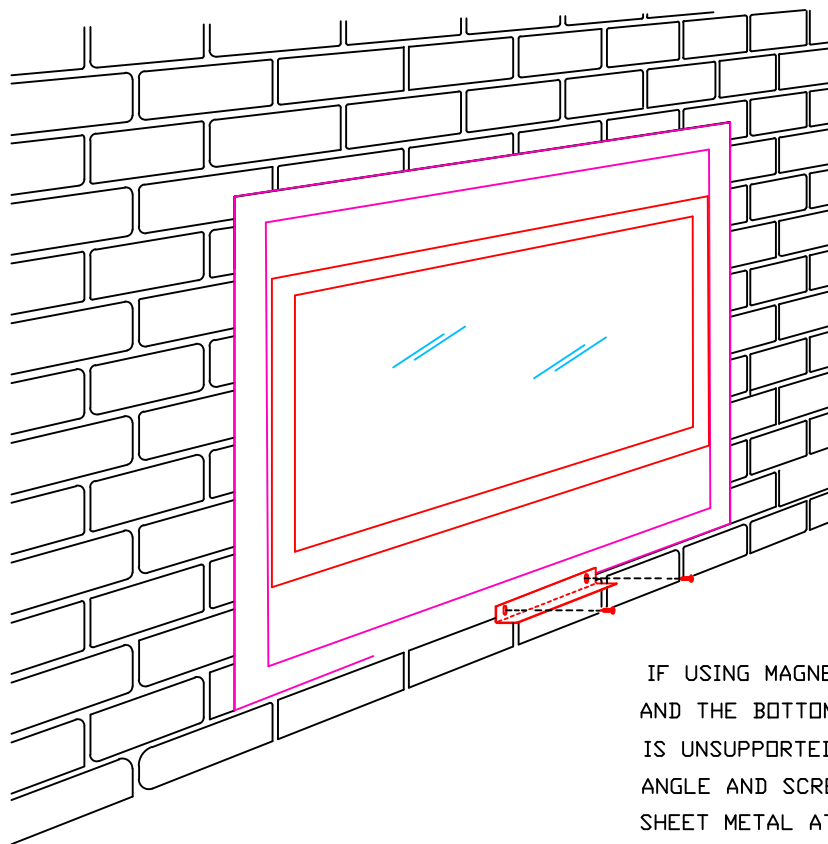

IF USING MAGNET MOUNTING
AND THE BOTTOM OF THE FRONT
IS UNSUPPORTED, USE DV SUPPORT
ANGLE AND SCREW DIRECTLY TO
SHEET METAL AT BOTTOM