

DESIGN SPECIALTIES

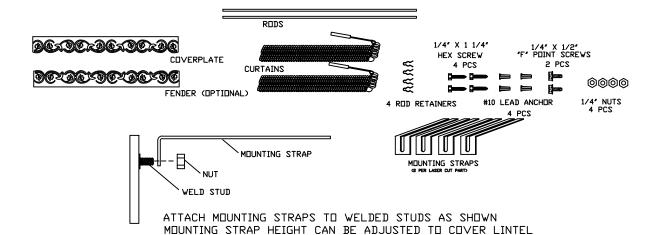

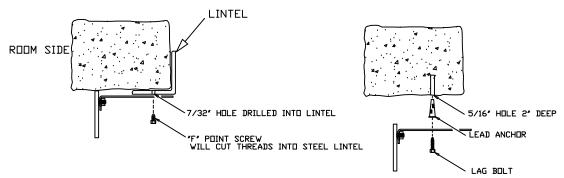

TO MOUNT TOP COVERPLATE:

ATTACH MOUNTING STRAPS TO THE WELD STUDS WITH THE NUTS PROVIDED. PLACE COVER PLATE IN PLACE AND MARK SLOT LOCATIONS IN THE MOUNTING STRAPS WITH A FELT TIPPED MARKER.

IF ATTACHING TO A STEEL LINTEL,

REMOVE COVER ANGLE AND USING A 7/32" DRILL,

DRILL HOLES IN THE CENTER OF THE MARKS.

USE THE "F" POINT SCREWS PROVIDED AND TIGHTEN COVERPLATE TO THE LINTEL

TO ATTACH COVERPLATE TO MASONRY,

DRILL HOLES IN MASONRY ON THE CENTER OF THE MARKED SLOT LOCATIONS USING A 5/16" MASONRY DRILL, MAKE SURE HOLES ARE 2" DEEP.

INSTALL LEAD ANCHOR AND TAP THEM IN WITH A HAMMER.

USE THE LAG BOLTS PROVIDED TO ATTACH COVERPLATE TO TOP OF OPENING. TO ATTACH FENDER,

ATTACH MOUNTING STRAPS TO THE WELD STUDS WITH THE NUTS PROVIDED. PLACE FENDER IN PLACE AND MARK SLOT LOCATIONS IN THE MOUNTING STRAPS WITH A FELT TIPPED MARKER.

USING A 5/16'' MASONRY DRILL. MAKE SURE HOLES ARE 2" DEEP. INSTALL LEAD ANCHOR AND TAP THEM IN WITH A HAMMER.

USE THE LAG BOLTS PROVIDED TO ATTACH FENDER TO BOTTOM OF OPENING.